



SPN1/ARM Mounting Instructions




1 Attach the SPN1/ARM cross-arm to an upright.

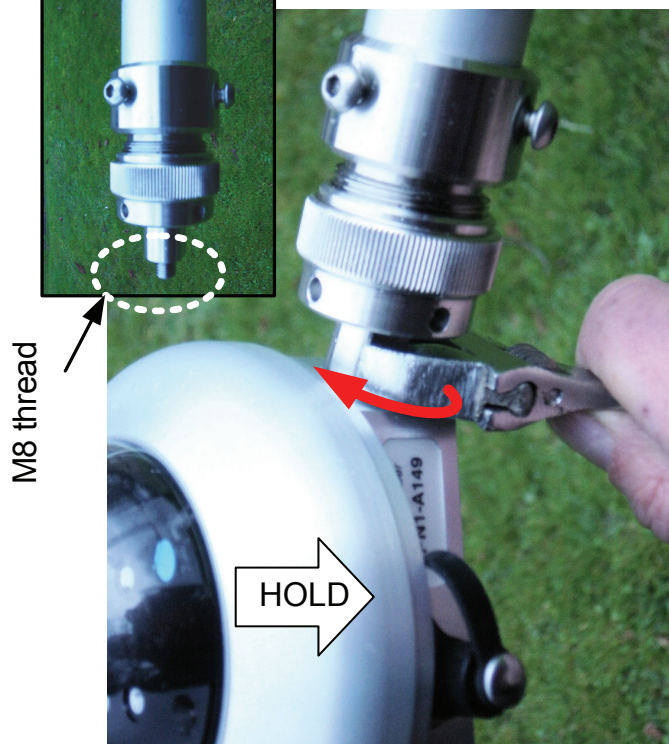

2 Screw the threaded bolt into the SPN1. This attaches the SPN1 to the cross arm ball joint .

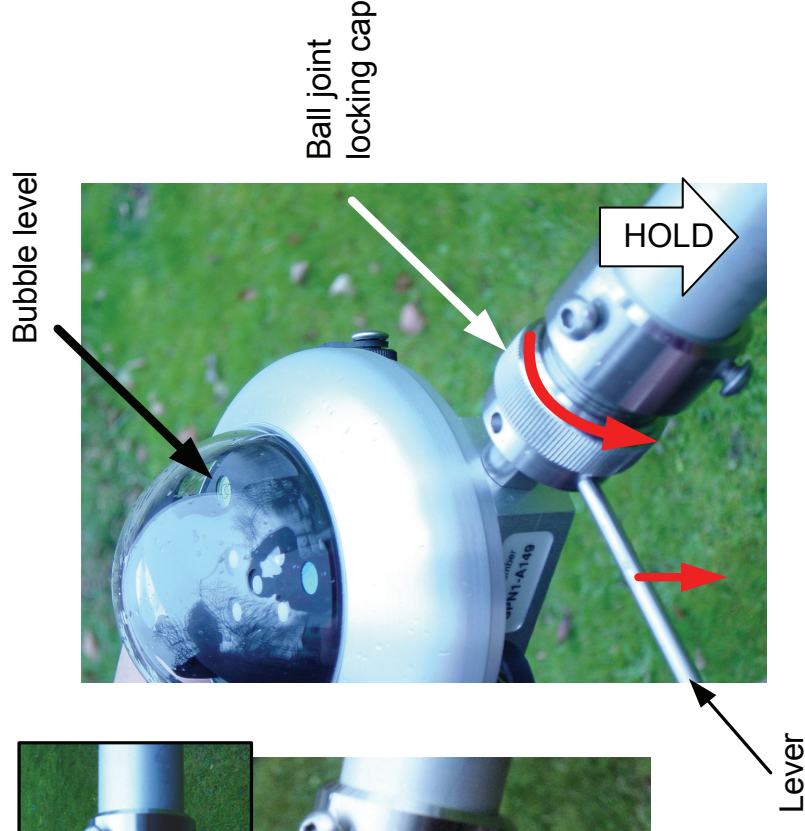

3 To Level the SPN1:
Loosen the locking cap on the ball joint using the lever provided.
Level the SPN1 - the bubble should be within the black ring in the bubble level.
Tighten the locking cap.

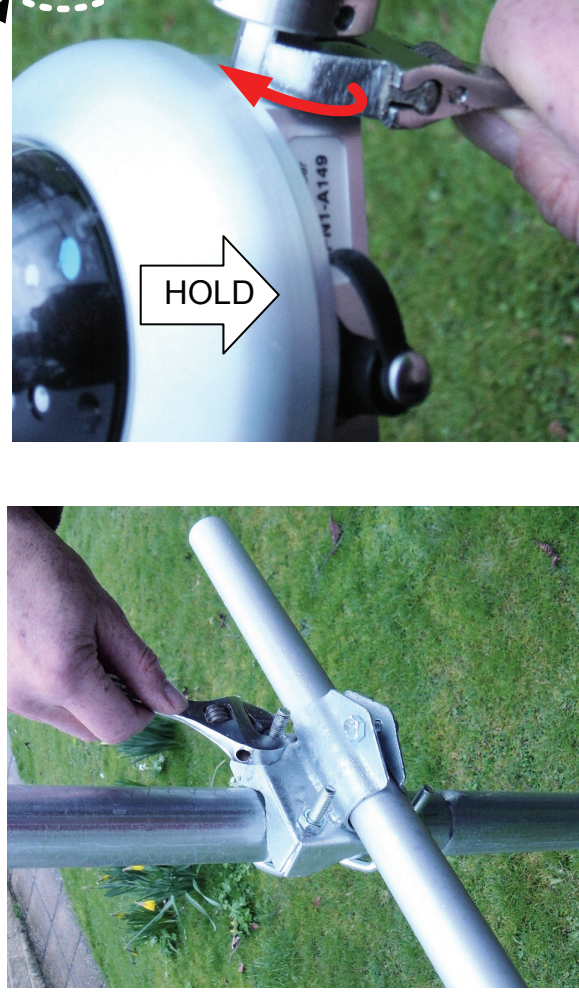

4 Connect the SPN1 signal cable and tie the cable to the cross arm with the cable ties provided.